


## 6 FUNCTION SELECTION AND SETTING


### ◆ Function Selection and Input/Output

1 Press and hold "☰" (menu) and "↵" (return) simultaneously for at least 3 seconds during the normal mode (when unit is not operated). The test run menu will be displayed.

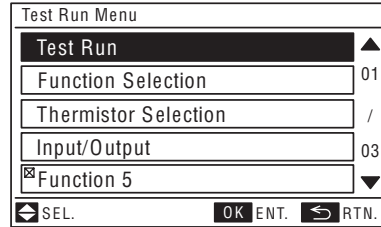


2 Select "Function Selection" or "Input/Output" from the test run menu and press "OK".

3 Select the indoor unit by pressing "△ ▽ ◀ ▶" and press "OK".  
(This screen is NOT displayed when the number of indoor unit connected with the remote control switch is 1 (one). In this case, (4) will be displayed.)

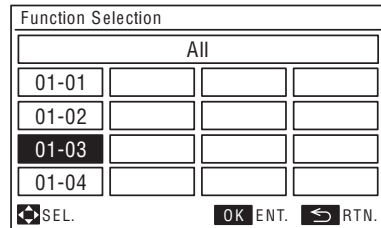


#### Function Selection

4 Press "△ ▽" and select the item.

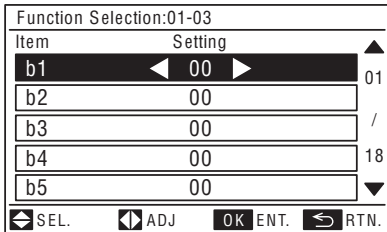


#### Input/Output Setting


4 Press "△ ▽" and select the item.

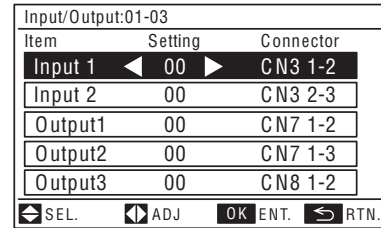

5 Press "◀ ▶" and change the setting.

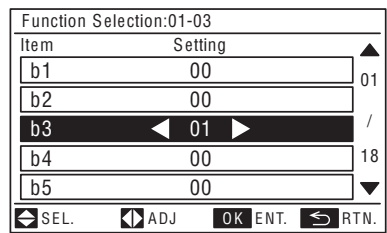


5 Press "◀ ▶" and change the setting.

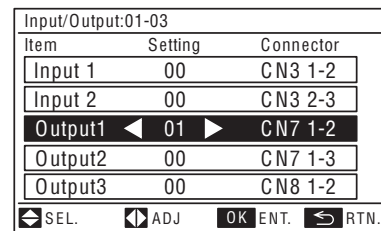

6 Press "OK" so that the confirmation screen will be displayed.

7 Select "Yes" and press "OK". The test run menu will be displayed after the setting is confirmed. If "No" is pressed, the screen will return to (4).

8 Press "↵" (return) on the test run menu to return to the normal mode.

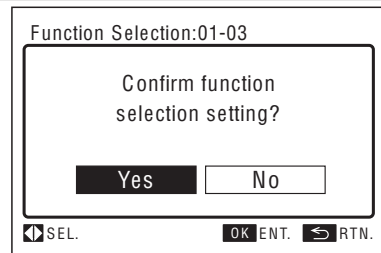

(Figure for Function Selection)

To set other units, press "↵" (return) at (4)(5) so that the screen will return to (3). (If the number of indoor unit connected with the remote control switch is 1 (one), the screen will return to (1).)