

Démarrage rapide Vanne MICITRV

1. Appairage avec la Box domotique.

Vérifier le guide de la Box.

Protocole de la Box
EnOcean EEP A5-20-01

2. Mode appairage

Appuyer 2 fois. Recommencer si nécessaire.



LED

1 x Clignotement = Appairage OK

6 x Clignotements = Pas d'appairage

3. Initialisation

Appuyer une fois sur le bouton, la vanne s'ajuste.
La vanne se trouve en fonctionnement normal.



> Supplément à savoir

- Il existe plusieurs types d'adaptateurs M30 x 1.5
- La vanne doit fonctionner librement et ne pas être entartrée.
- La position de la vanne (0-100%) est spécifiée dans le protocole EnOcean A5-20-01
- Toutes les 10 minutes, la vanne se connecte à la Box domotique pour s'ajuster sur la position spécifiée.
- Mode été : L'intervalle de communication radio passe de 10 minutes à 8 heures.
- Pour démonter la vanne, presser 2 fois le bouton et attendre que le moteur s'arrête, puis la dévisser.



Ecrou
M30 x 1.5

EnOcean radio ID
Numéro de série



Sonde température
LED
Bouton de contrôle

Téléphone : +33 (0)3 59 61 02 41
e-mail : contact@ubiwizz.com
www.ubiwizz.com

Démarrage rapide Vanne MICITRV

1. Appairage avec la Box domotique.

Vérifier le guide de la Box.

Protocole de la Box
EnOcean EEP A5-20-01

2. Mode appairage

Appuyer 2 fois. Recommencer si nécessaire.



LED

1 x Clignotement = Appairage OK

6 x Clignotements = Pas d'appairage

3. Initialisation

Appuyer une fois sur le bouton, la vanne s'ajuste.
La vanne se trouve en fonctionnement normal.



> Supplément à savoir

- Il existe plusieurs types d'adaptateurs M30 x 1.5
- La vanne doit fonctionner librement et ne pas être entartrée.
- La position de la vanne (0-100%) est spécifiée dans le protocole EnOcean A5-20-01
- Toutes les 10 minutes, la vanne se connecte à la Box domotique pour s'ajuster sur la position spécifiée.
- Mode été : L'intervalle de communication radio passe de 10 minutes à 8 heures.
- Pour démonter la vanne, presser 2 fois le bouton et attendre que le moteur s'arrête, puis la dévisser.



Ecrou
M30 x 1.5

EnOcean radio ID
Numéro de série



Sonde température
LED
Bouton de contrôle

Téléphone : +33 (0)3 59 61 02 41
e-mail : contact@ubiwizz.com
www.ubiwizz.com

Quick Start - MICITRV valve

- 1. Set room controller to pairing mode**
Check the user guide of the room controller.



- 2. Pairing-mode**
Press the push button twice. You may have to repeat this step.




LED flash pattern
1 x flash = Successful pairing
6 x flash = Pairing failed

- 3. Reference run**
Press the push button once; the valve adjusts the min and max positions. Then enters normal operation.



> Additional things to know

- Connection nut M30x1.5; adapters are available for many other valve types
- Valve should be working freely and not be calcified
- Valve position (0-100%) is specified in the EnOcean protocol A5-20-01
- Every 10 minutes, the valve connects to the room controller, requesting an update to the valve position. Then the valve moves to the specified position.
- Summer mode : Radio communication interval in creased from 10 minutes to 8 hours.
- To remove the valve, press the push button twice and wait until the motor stops. Then loosen the coupling nut.

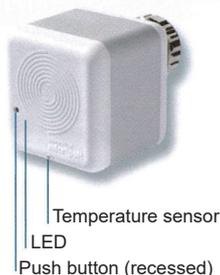

Phone : +33 (0)3 59 61 02 41
e-mail : contact@ubiwizz.com
www.ubiwizz.com

Quick Start - MICITRV valve

- 1. Set room controller to pairing mode**
Check the user guide of the room controller.



- 2. Pairing-mode**
Press the push button twice. You may have to repeat this step.




LED flash pattern
1 x flash = Successful pairing
6 x flash = Pairing failed

- 3. Reference run**
Press the push button once; the valve adjusts the min and max positions. Then enters normal operation.



> Additional things to know

- Connection nut M30x1.5; adapters are available for many other valve types
- Valve should be working freely and not be calcified
- Valve position (0-100%) is specified in the EnOcean protocol A5-20-01
- Every 10 minutes, the valve connects to the room controller, requesting an update to the valve position. Then the valve moves to the specified position.
- Summer mode : Radio communication interval in creased from 10 minutes to 8 hours.
- To remove the valve, press the push button twice and wait until the motor stops. Then loosen the coupling nut.

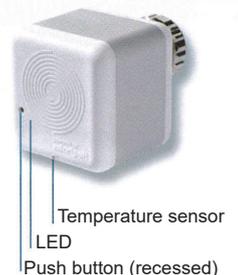

Phone : +33 (0)3 59 61 02 41
e-mail : contact@ubiwizz.com
www.ubiwizz.com